



# G8600 SERIES Visual Indicator SERVICE INSTRUCTIONS

## **\*\* WARNING \*\***

### **RELIEVE ALL PRESSURE IN THE LINE BEFORE SERVICING FILTER ASSEMBLY**

- 1) Follow all company/OSHA safety rules, such as wearing protective goggles and gloves, etc.
- 2) Remove visual indicator body from head being careful not to lose any of the indicator assembly parts when pressure on spring is released.
- 3) Examine all of the indicator assembly components for damage or wear.  
If any components need replacement, contact the factory for the appropriate replacement parts.
- 4) For proper indicator function, the differential pressure channels from the in & out ports must be free of debris. If necessary use compressed air to blow any debris out of the channels.
- 5) When reinstalling the visual indicator assembly into the filter head be sure to install all components per the appropriate assembly drawing. All o-ring seals need to be lubricated with appropriate lubrication prior to assembly. Acceptable lubricants include petroleum jelly or silicone.
- 6) Torque indicator to 40 ft-lbs. Check for proper seating to head with a shim gauge.